
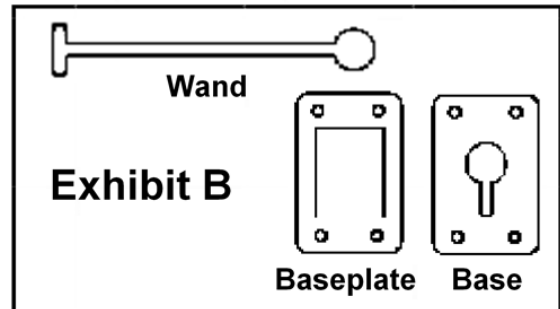


4" Ultimate Door Holder

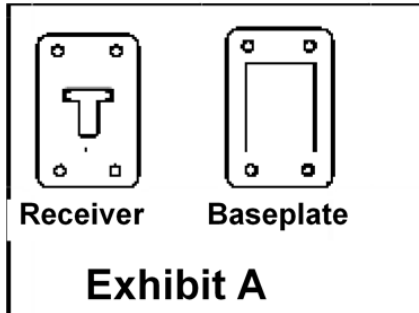

1. The baseplate goes behind the receiver. Make sure that the baseplate and receiver are in the upright position as shown above in Exhibit A. Now mount to the door. The baseplate is designed in the wedge shape to force the wand down the receiver. With this design, under normal movement, the door will remain open until you remove the wand from the receiver.
2. The wand gets inserted through the back of the base leaving the large ball inside this base. The baseplate then gets placed behind the Base. Make sure that the base is in the upright position as shown above in Exhibit B and then mount it to the side of the structure.