

GAS SPRING INSTALLATION INSTRUCTIONS

CAUTION
CONTENTS UNDER PRESSURE.
DO NOT PUNCTURE OR HEAT.

MISE EN GARDE
CONTENU SOUS PRESSION.
NE PAS PERFORER OU CHAUFFER.

INSTALLATION INSTRUCTIONS:

1. Have someone hold the door, lid, bed cover, or hatch while replacing the lift support. **DO NOT USE PROP!**
2. Before removing the old lift support examine your current end connector hardware to determine which components should be reused or replaced.
3. The new lift support(s) must be installed in the same position as the one(s) which are removed. Mount the lift support(s) so that the rod is facing down when in the closed position. Gas springs should be replaced in pairs, where applicable.

DO NOT NICK OR SCRATCH THE ROD.
DO NOT APPLY OIL OR LUBRICANT ON THE ROD

4. Compare the end connectors of your lift support to the illustrations provided and see below for additional instructions.

REMOVABLE BALL CONNECTORS

- Remove old lift support by prying the retaining clip up (Fig. 1) or retaining cap up (Fig. 2) with the blade of a common screwdriver. Do not remove retaining clip or cap.
- With retaining cap in raised (unlocked) position, install new lift support by inserting ball into socket. Snap retaining cap closed into locked position.

EYELET CONNECTOR

- Remove old lift support by removing the retaining clip (Fig. 3) or cap (Fig. 2).

PURCHASE NEW BALL STUD OR BALL BRACKET

- With retaining cap in raised (unlocked) position, install new lift support by inserting ball into socket. Snap retaining cap closed into locked position. Refer to the illustration shown in Fig. 1

MADE IN CHINA

INSTRUCTIONS D'INSTALLATION:

1. Demander à quelqu'un de retenir la porte, le couvercle, le couvre-boîte ou la trappe au moment de remplacer le support d'élévation. **NE PAS UTILISER COMME SUPPORT.**
2. Avant de retirer l'ancien support d'élévation, examiner la quincaillerie actuelle du connecteur d'extrémité pour déterminer quels composants devraient être réutilisés ou remplacés.
3. Les nouveaux supports d'élévation doivent être installés dans la même position que ceux qui ont été retirés. Installer les supports d'élévation de sorte que la tige pointe vers le bas en position fermée. Les ressorts à gaz devraient être remplacés en paires, si applicable.

NE PAS ENTAILLER OU ÉGRATIGNER LA TIGE. NE PAS APPLIQUER D'HUILE NI DE LUBRIFIANT SUR LA TIGE.

4. Comparer les connecteurs d'extrémité du support d'élévation à l'illustration fournie, puis consulter les instructions supplémentaires ci-dessous.

CONNECTEURS DE BOULE AMOVIBLES

- Retirer l'ancien support d'élévation en écartant la pince de retenue (Fig. 1) ou le capuchon de retenue vers le haut (Fig. 2) à l'aide de la lame d'un tournevis ordinaire. Ne pas retirer la pince ni le capuchon.
- Avec le capuchon de retenue en position surélevée (non verrouillée), installer le nouveau support d'élévation en insérant la boule dans la cavité de support. Refermer le capuchon de retenue en position verrouillée.

CONNECTEUR À CEILLET

- Retirer l'ancien support d'élévation en enlevant la pince de retenue (Fig. 3) ou le capuchon (Fig. 2).

ACHETER UN NOUVEAU PIVOT OU SUPPORT DE BOULE

- Avec le capuchon de retenue en position surélevée (non verrouillée), installer le nouveau support d'élévation en insérant la boule dans la cavité de support. Refermer le capuchon de retenue en position verrouillée. Voir l'illustration de la Fig. 1

FABRIQUÉ EN CHINE

Fig. 1

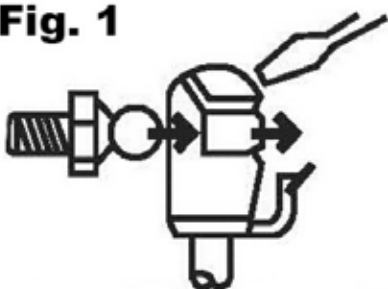


Fig. 2

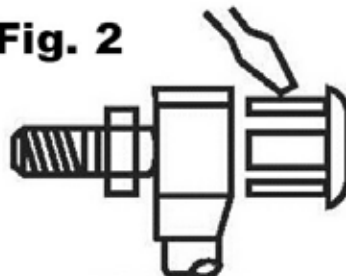


Fig. 3

